

Quirky



PORKFOLIO

save big with this pig

OVERVIEW

Porkfolio is the world's smartest piggy bank. It wirelessly connects to the Wink app on your mobile device so you can track your balance and set financial goals from afar. Its nose lights up in celebration every time a U.S. coin is inserted and its built-in motion detector alerts you when someone tampers with your stash.

FEATURES


- 1 Coin slot registers U.S. quarters, nickels, dimes, pennies, and dollar coins
- 2 Nose lights up to confirm deposits
- 3 Instantly connects over Wi-Fi to the Wink app on your mobile device for access to current balance, settings, notifications, and more
- 4 Built-in motion detector can trigger push notifications

WHAT'S INCLUDED (in the box)

- 1 Porkfolio
- 2 Two AA alkaline batteries
- 3 Quick Start Card

REQUIRED FOR USE (in the box)

- 1 Wi-Fi®
- 2 Mobile device
- 3 Wink app

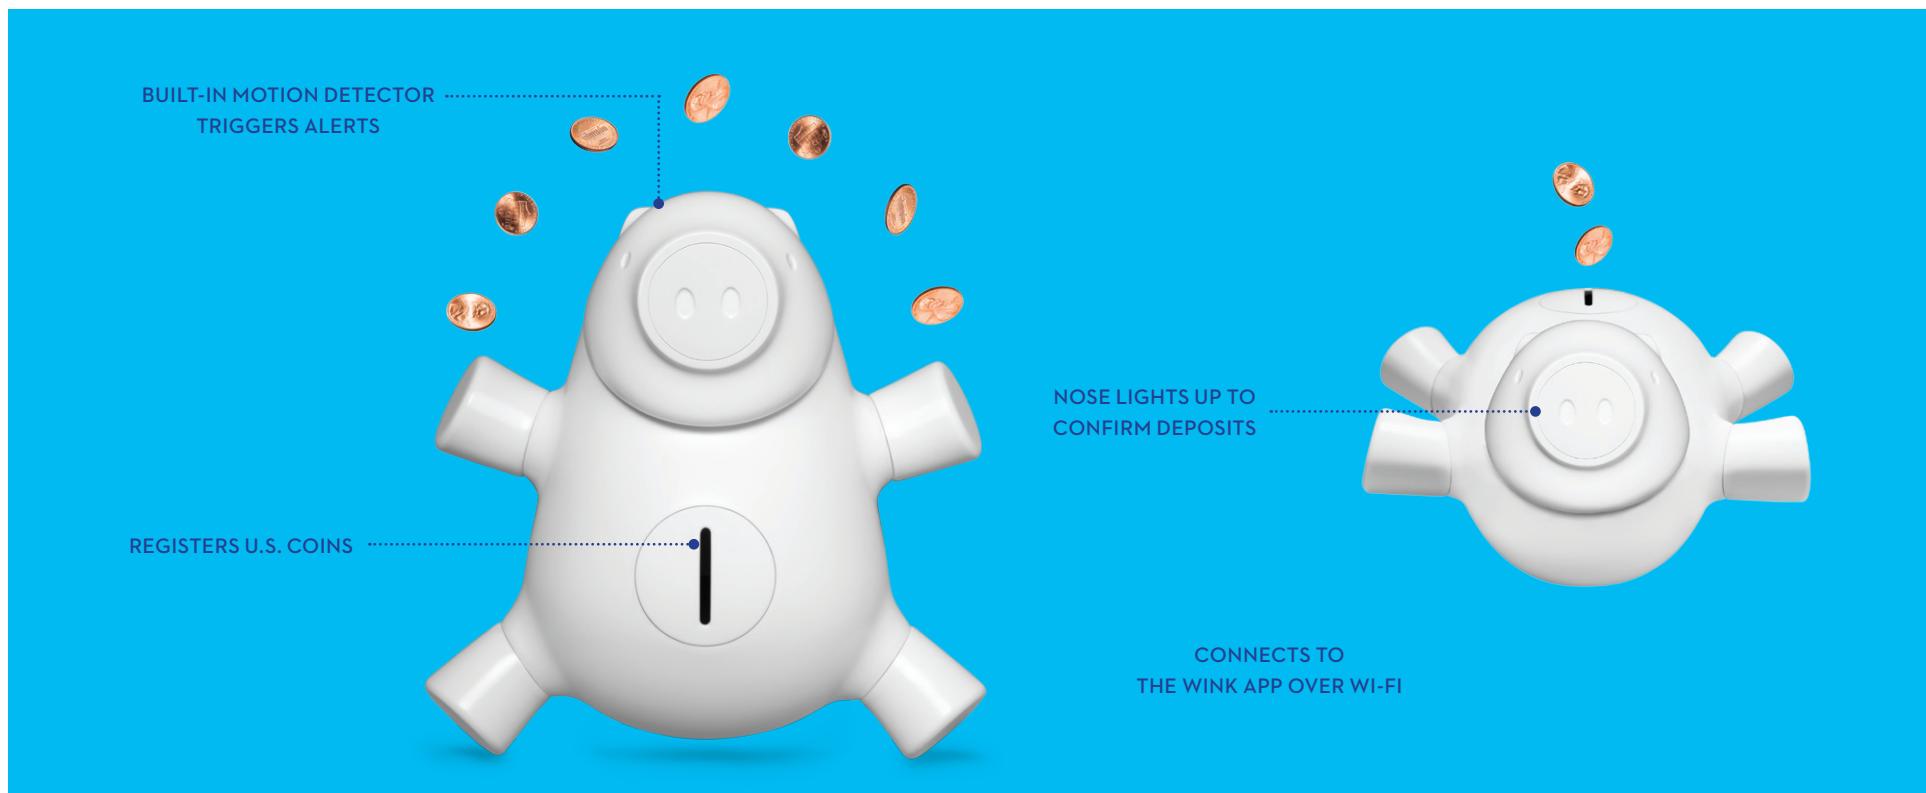

GETTING STARTED

- 1 Download and install the Wink app on your mobile device as outlined in the Quick Start Card. The app will enable a Wi-Fi® connection between your mobile device and Porkfolio.
- 2 Flip Porkfolio on to its belly. Pull battery tab out from under the coin plug to activate.
- 3 Open the Wink app. Follow the app's instructions to connect to your Porkfolio.

Note: Your mobile device connects by sending light pulses into a sensor on your Porkfolio. It is best to do this in a dimly lit environment.

REMOVING AND INSTALLING BATTERIES

- 1 Remove Porkfolio's head then open the battery compartment within it.
- 2 Remove exhausted batteries and/or insert two new AA alkaline batteries with correct polarity.
- 3 Close compartment and reattach Porkfolio's head.

Note: Non-rechargeable batteries are not to be recharged. Exhausted batteries are to be removed from Porkfolio. The supply terminals are not to be short circuited.

USING PORKFOLIO

Deposit U.S. quarters, nickels, dimes, pennies, and dollar coins into the coin slot.

Porkfolio's nose will light up to confirm each deposit.

Additional uses and capabilities can be found on the Wink app.

Deposits are recorded and sent via your Wi-Fi® connection to the app. The app displays your current balance and allows you to rename your piggy bank, choose colors, set savings goals, and receive notifications

TROUBLESHOOTING

If a Wi-Fi® connection is unavailable when inserting coins to the piggy bank, Blink Up will store the data and update the Wink app once the network is restored.

Questions? For service and support or tutorials, email us at questions@quirky or call 1-866-5QUIRKY.

PRECAUTIONS, CARE AND MAINTENANCE

- DO NOT** submerge Porkfolio in water.
- DO NOT** wash Porkfolio in a dishwasher.
- DO NOT** expose Porkfolio to heat sources.
- DO NOT** dispose of alkaline batteries in fire as they may explode.
- DO NOT** attempt to disassemble, alter or apply heat to the battery.
- DO NOT** mix old and new batteries.
- DO NOT** mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium)
- ONLY** use the manufacturer recommended AA alkaline batteries.
- Safely dispose of alkaline batteries with your normal household waste.
- Use care to avoid dropping the battery or subjecting it to severe impact, which could damage the product.
- The battery should not be immersed in water.
- Keep batteries in a cool dry place.
- Batteries exposed to extremely high heat may leak.
- Clean product, external only, with a damp soft cloth.
- Use a dry soft cloth to clean the battery compartment when replacing batteries.

IMPORTANT SAFETY INSTRUCTIONS / WARNINGS



CAUTION

Wink devices connect by receiving flashing light patterns that come from your phone's screen. Please note that a very small percentage of individuals may experience epileptic seizures when exposed to such light patterns or flashing lights. If you have an epileptic condition, consult your physician prior to using this app to BlinkUp a device.

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read Instructions**—All safety and operating instructions should be read before operating the device.
 - 2 Heed Warnings**—All warnings on the device and in the operating instructions should be adhered to.
 - 3 Follow Instructions**—All operating and safety instructions should be followed.
 - 4 Water & Moisture**—DO NOT submerge in water or place in a dishwasher, as it will cause damage to the internal electrical components. The device should never be used in, on or near water for risk of electrical shock.
 - 5 Batteries**—Use the recommended alkaline batteries for best performance. Keep batteries away from children. Keep batteries away from water and heat. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
 - 6 Ventilation**—The device should always be located in such a way that it maintains proper ventilation.
- 7 Heat**—Never locate the device near heat sources such as radiators, floor registers, stoves or other heat-generating devices.
 - 8 Cleaning**—Clean with a damp soft cloth.
 - 9 Periods Of Non-Use**—Remove the batteries when the device is not expected to be used for several months.
 - 10 Dangerous Entry**—Care should be taken that no foreign objects or liquids fall or are spilled on or inside the device.
 - 11 Damage Requiring Service**—The device should be serviced by licensed technicians when:
 - The internal electronic components have been damaged.
 - Objects have fallen or liquid spilled inside of the device.
 - The device has been exposed to moisture.
 - The device does not appear to be operating properly or exhibits a marked change in performance.
 - The device has been dropped or becomes damaged.
 - 12 Service**—The device should always be serviced by licensed technicians. Only replacement parts specified by the manufacturer should be used. The use of unauthorized substitutions may result in fire, shock, or other hazards.

A NOTE ABOUT RECYCLING:

This product and its packaging materials are recyclable, if applicable. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations. This product and the supplied accessories constitute the applicable product according to the WEEE directive.

MODIFICATIONS DISCLAIMER WARNING!!!

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any Radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Quirky could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF EXPOSURE STATEMENT

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum 20cm distance between the device and your body. Use only the supplied antenna.

QUIRKY ORIGINAL PURCHASE PRODUCT WARRANTY

Quirky, Inc. ("Quirky") warrants to the original purchaser ("Purchaser") of this Quirky product, for the period of one (1) year following the date on which Purchaser purchases the product, that the product shall be free of defects in design, assembly, material, or workmanship.

Quirky will repair or replace, at its option, any defective product free of charge.

In order to qualify for this warranty, the Purchaser must provide the defective product and a copy of the original receipt of purchase, to Quirky for inspection. The receipt of purchase must indicate the product purchased, price paid, date of purchase, and name of merchant.

Alternatively, at the Purchaser's election, but subject to Quirky's approval, the Purchaser may obtain replacement parts from Quirky, free of charge. To obtain replacements parts, the Purchaser must provide the product serial number to Quirky in connection with any request for replacement parts.

To request service under this warranty, contact Quirky at 866-5-QUIRKY or questions@quirky.com, and a Quirky representative will provide instruction on how to proceed.

This warranty shall be null and void if Quirky determines that the product has been improperly installed, altered or tampered with any way. This warranty does not protect against normal-use wear and tear or damage due to abuse.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF QUIRKY. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL QUIRKY BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY QUIRKY PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some jurisdictions do not allow exclusions or limitations on implied warranties or incidental, consequential or other damages, so the above exclusions and limitations may not apply to you.

COPYRIGHT NOTICE

Copyright 2013 Quirky Incorporated

No part of this manual may be reproduced or modified without written consent from Quirky Incorporated.

Quirky Incorporated is not liable or responsible for any operational, or technical errors or omissions made in this manual.

Quirky is trademark of Quirky Incorporated.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance.

HOW TO OBTAIN SERVICE

Need help? We are available

weekdays: 9AM - 9PM EST

weekends: 12PM - 6PM EST



Email: questions@quirky.com

Call: 1-866-5QUIRKY

