



Motion Sensor

Quick Start Guide

1. Download/Update the Wink App

Visit the iTunes App Store or Google Play Store to download the latest version of the Wink app. The app will guide you through some quick steps to sign up or log in.



2. Follow Setup in the Wink App

First, a Wink Hub is required, so be sure that it has already been connected in the Wink app.

Next, navigate to the Products section and tap the “Add to Wink” button. Find the Wink Motion Sensor and follow the instructions in the app to complete the connection process.

 
Note: The battery pull tab keeps the battery from powering on the motion sensor until you are ready to use it. The Wink app instructions will walk you through when to remove the battery pull tab to power on the device.

Installation

Placement on Table Top

You can use the facet on the sensor body to angle the motion sensor on a table top or shelf to monitor a room.


1. Make sure the motion sensor is within 30 feet of your Wink Hub.
2. Remove the magnetic cradle and store it for later use if needed.
3. Place the sensor body on a horizontal surface with an unobstructed view of the area you wish to monitor.

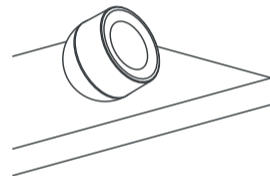

Placement with Wall Mount

You can also mount the motion sensor on any wall with a central line-of-sight perspective of the area you wish to monitor.

 1. Make sure the motion sensor is within 30 feet of your Wink Hub.
2. Mount the motion sensor as high as possible to avoid limiting its effective range with obstacles like tables and chairs.

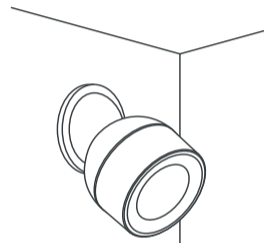


Installation with Double-Stick Tape

1. Wipe your wall clean of dust and grease.
2. Peel and stick the magnetic cradle to your wall using the included double-stick tape.
3. Place the sensor body on the magnetic cradle at an angle to properly monitor your room.

Installation with Hardware

 1. Twist the mount counterclockwise to separate the magnetic cradle from the wall mount.
2. Hold the wall mount to your wall and drive the included screws through the screw holes. Use included plastic anchors if attaching to drywall.
3. Reattach the magnetic cradle to the wall mount.
4. Place the sensor body on the magnetic cradle at an angle to properly monitor your room.

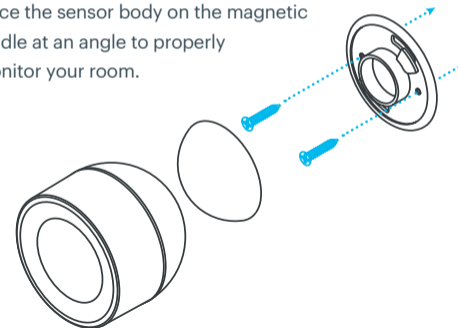


Generic Z-Wave Guide

Including/Connecting to a Z-Wave Network

Follow the instructions for your Z-Wave certified Controller to enter inclusion mode. When prompted by the Controller:

 1. Bring the motion sensor to within 10 feet of your controller. After inclusion, the device can be moved to any desired location.
2. If connecting a new motion sensor, remove the battery tab. Remove the sensor cover by twisting it apart counterclockwise and make sure the battery is installed correctly.
3. Press the Connect Button quickly 3 times in a row.
4. The LED indicator will flash five times to indicate inclusion.

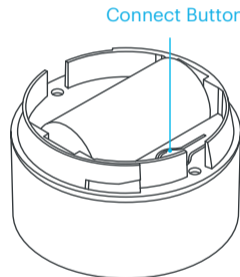

Excluding/Disconnecting from a Z-Wave Network

 
Follow the instructions for your Z-Wave certified Controller to enter exclusion mode. When prompted by the Controller:

1. Remove the sensor cover by twisting it counterclockwise and make sure the batteries are installed correctly.
2. Press the Connect Button quickly 3 times in a row.

The LED Indicator will flash five times indicating exclusion/disconnection.

Opening the Sensor

1. Grasp the two halves of the sensor firmly.
2. Twist counterclockwise and pull apart to separate.

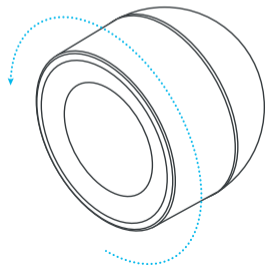

Resetting to Factory Settings

To disconnect from a Z-Wave Network and restore factory default settings:

1. Remove the sensor cover by twisting it counterclockwise and make sure the batteries are installed correctly.
2. Hold the Connect Button for 10 seconds until the LED indicator blinks once, then release the button.

Note: Only do this if the controller is disconnected or otherwise unreachable!

Need Help? Contact Wink Customer Service

Visit wink.com/help, or shoot us an email at questions@wink.com.
Want to speak to a human? Reach us at 1-844-WINK-APP

Warranty

For warranty information regarding this product, visit www.wink.com/returns

US Compliance Statement (FCC)

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Model: WNK-MOT1

FCC: 2ACAJ-WMOT1



Tested to Comply with FCC Standards
FOR HOME OR OFFICE USE

Canada Compliance Statement (IC)

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. Son exploitation est autorisée aux deux conditions suivantes: (1) il ne doit pas produire de brouillage; et (2) il doit accepter tout brouillage radioélectrique subi, même si celui-ci est susceptible d'en compromettre le fonctionnement.

IC: 11938A-WMOT1

Correct Disposal of Batteries in this Product

 
This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other wastes for disposal.

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

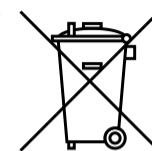

©2017 Wink Labs, Inc. All rights reserved
606 W 28th St., Floor 6
New York, NY 10001
www.wink.com