



Siren & Chime

Quick Start Guide

1. Download/Update the Wink App

Visit the iTunes App Store or Google Play Store to download the latest version of the Wink app. The app will guide you through some quick steps to sign up or log in.



2. Follow Setup in the Wink App

First, a Wink Hub is required, so be sure that it has already been connected in the Wink app.

Next, navigate to the Products section and tap the “Add to Wink” button. Find the Wink Siren and follow the instructions in the app to complete the connection process.

Note: The battery pull tab keeps the battery from powering on the siren until you are ready to use it. The Wink app instructions will walk you through when to remove the battery pull tab to power on the device.

Installation


Placement

1. Make sure the siren is within 30 feet of your Wink Hub.
2. The siren can be installed just about anywhere — on a ceiling, wall, table, shelf, etc. Just make sure there aren't any obstructions to dampen the sound.

Installing with Hardware

1. Drive the screw into the wall, leaving the head protruding out. Use included plastic anchor if attaching to drywall.
2. Slide the siren over the screw head, making sure the screw head goes into the mounting hole. Pull the siren down slightly to lock the siren in place.

To remove the siren, lift up slightly, then pull away from the wall.

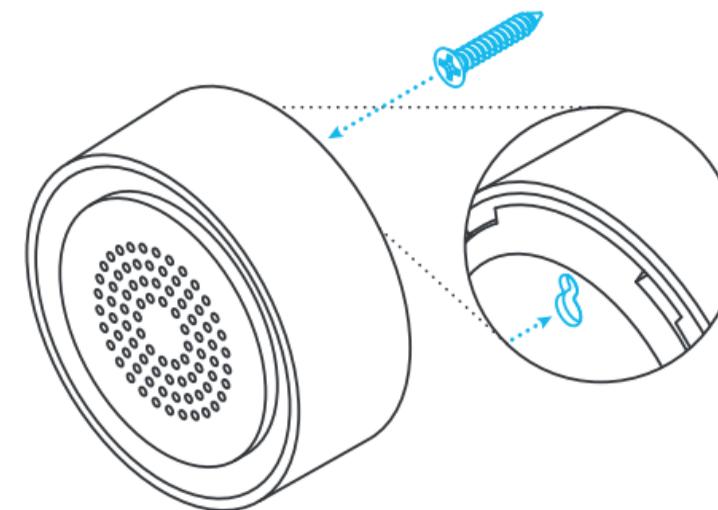


Generic Z-Wave Guide

Including/Connecting to a Z-Wave Network

Follow the instructions for your Z-Wave certified Controller to enter inclusion mode. When prompted by the Controller:

1. For proper inclusion, bring the Siren to the location where it will be used.
2. If connecting a new siren, remove the battery tab. Remove the back plate by twisting it clockwise and make sure the batteries are installed correctly.
3. Press the Connect Button quickly 3 times in a row.
4. The LED indicator will flash five times to indicate inclusion.

Connect Button

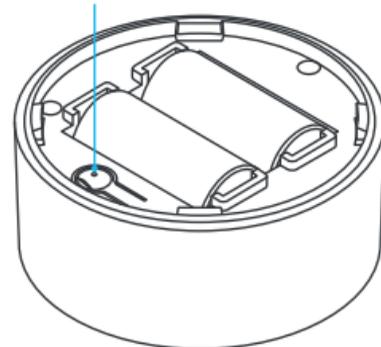

Excluding/Disconnecting from the Z-Wave Network


Follow the instructions for your Z-Wave certified Controller to enter exclusion mode. When prompted by the Controller:

1. Remove the back plate by twisting it clockwise and make sure the batteries are installed correctly.
2. Press the Connect Button quickly 3 times in a row.

The LED Indicator will flash five times to indicate exclusion/disconnection.

Opening the Siren

1. Twist the back plate clockwise.
2. Pry off the back plate.

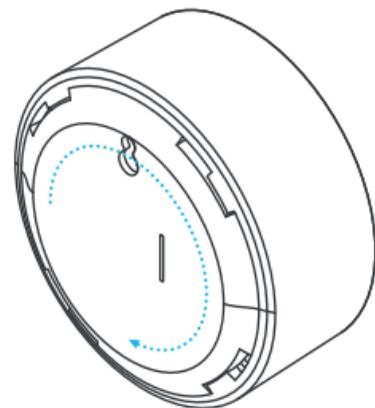

Resetting to Factory Settings

To disconnect from the Z-Wave Network and restore factory default settings:

1. Remove the back plate by twisting it clockwise and make sure the batteries are installed correctly.
2. Hold the Connect Button for 10 seconds until the LED indicator blinks once, then release the button.

Note: Only do this if the controller is disconnected or otherwise unreachable!

Need Help? Contact Wink Customer Service

Visit wink.com/help, or shoot us an email at questions@wink.com.
Want to speak to a human? Reach us at 1-844-WINK-APP

Warranty

For warranty information regarding this product, visit www.wink.com/returns

US Compliance Statement (FCC)

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Model: WNK-SIR1

FCC: 2ACAJ-WSIR1



Tested to Comply with FCC Standards
FOR HOME OR OFFICE USE

Canada Compliance Statement (IC)

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. Son exploitation est autorisée aux deux conditions suivantes: (1) il ne doit pas produire de brouillage; et (2) il doit accepter tout brouillage radioélectrique subi, même si celui-ci est susceptible d'en compromettre le fonctionnement.

IC: 11938A-WSIR1

Correct Disposal of Batteries in this Product

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other wastes for disposal.

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

©2017 Wink Labs, Inc. All rights reserved
606 W 28th St., Floor 6
New York, NY 10001
www.wink.com

